


Wide Beam Ultrasonic Sensor

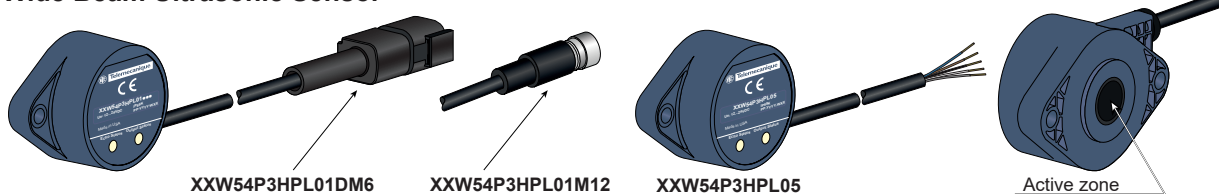

WARNING


UNINTENDED EQUIPMENT OPERATION

- This device does not have a Performance Level or Safety Integrity Level or any other type of capability with regard to functional safety
- Do not use this device to detect objects within the deadband (blind zone) or outside the sensing window.
- Do not use this device for safety related purposes.
- Use appropriate equipment and measures to protect against all hazards identified in your risk assessment.


Failure to follow these instructions can result in death, serious injury, or equipment damage.

http://qr.tesensors.com/XX0003

Dimensions

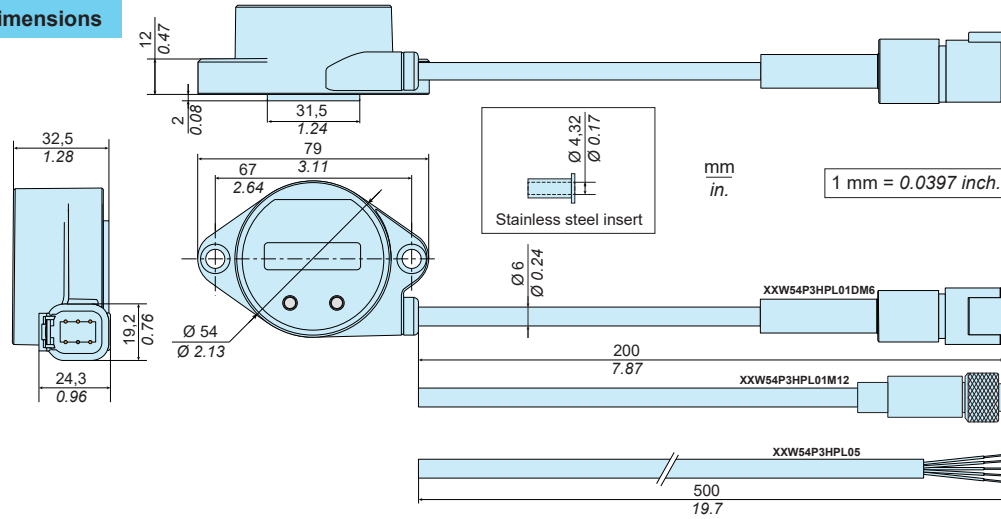

LEDs

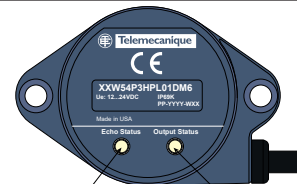


- Green: Echo Status
- White: Power Applied
- Yellow: Output Status

The White LED is ON when the green is OFF (to indicate that the product is powered).

Green = object detected between the blind zone and the max sensing distance (from 0,425m to 4m / 1.39 to 13.1 ft.).


Yellow = object detected between the near and the far limits (from 0,425m to 3m / 1.39 to 9.8 ft.).

Connectors wiring

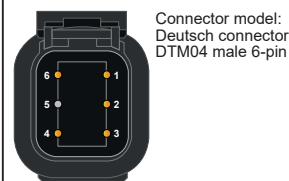

XXW54P3HPL01DM6

Pin Number	Wire Color	Description
①	BN: Brown	+12...24 Vdc
②	BU: Blue	0 Vdc
③	BK: Black	0,5...4,5V Analog Output (3)
④	WH: White	PNP Digital Output
⑤ (2)	/	Not Connected
⑥	GY: Grey	Synchronization (1)

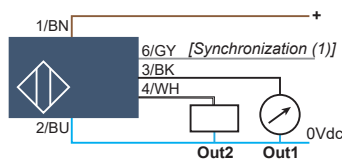

- Note : (1): See synchronization section
- (2): Deutsch connector Pin 5 = Sealing plug.




(3): The analogue output is 5 volts in case of excessive environmental noise. This exceeded output value means that the sensor cannot work properly in this environment.




XXW54P3HPL01M12

Pin Number	Wire Color	Description
①	BN: Brown	+12...24 Vdc
②	WH: White	PNP Digital Output
③	BU: Blue	0 Vdc
④	BK: Black	0,5...4,5V Analog Output (3)
⑤	GY: Grey	Synchronization (1)




Cable model: 5 wires - 0,34 mm² / 22 AWG

Tightening torque

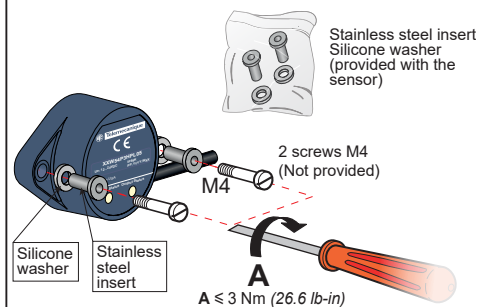

CAUTION
RISK OF MATERIAL DAMAGE
The stainless steel insert and the silicone washer are mandatory in all mounting cases
Failure to follow these instructions can result in injury or equipment damage.

Wiring diagrams

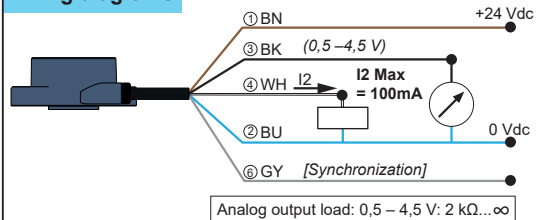


Sensor type	0,5 - 4,5 V
Rated supply voltage	12 or 24 Vdc Min = 9 Vdc Max = 32 Vdc with reverse polarity protection


WARNING

IMPROPER CONNECTION
• The XXW54P3HPL0 must be powered by a dedicated safety extra low voltage (SELV) or a protected extra low voltage (PELV).
• The XXW54P3HPL0 operate directly from a 24 Vdc power supply. The power supply must meet the requirements of IEC 60204-1.
The SELV Schneider Electric part number ABL8RPS24... is recommended.
Failure to follow these instructions can result in death, serious injury or equipment damage.

Flush mounting limit

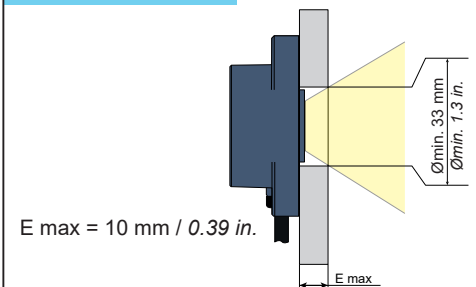

Synchronization (side by side application)

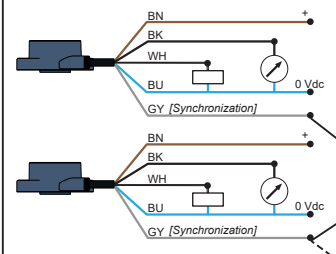

Synchronization operation
The synchronization is recommended if more than 1 sensor is used in same direction in order to avoid any interference between the sensors due to their width of the beam.
Up to 8 sensors can be synchronized to operate side by side by electrically connecting all pin no.6 (grey) wires together.
All sensors must be the same model and have the same cycle time setting.


Noise Detection

This sensor is equipped with a noise detection capability. This is enabled by default. When noise detection is enabled, the sensor's analog output will output 5 Volts when it detects excessive environmental noise. This alerts the user that the environmental noise is likely too excessive for the sensor to sense object distances properly. While it will not necessary distinguish all noise, it can be aid to the user.


The settings associated with noise detection can be changed using the Ultrasonic Sensors configuration interface and the dedicated software.

Mutual influence between 2 side by side separate mobile equipments
 (Sensors in the same mobile equipment must be synchronized but between 2 mobile equipments, the sensors can not be synchronized.)

Note : For the side by side use, consider the machine manufacturer's prescriptions without ever going below the 2,5 m / 8.2 ft .


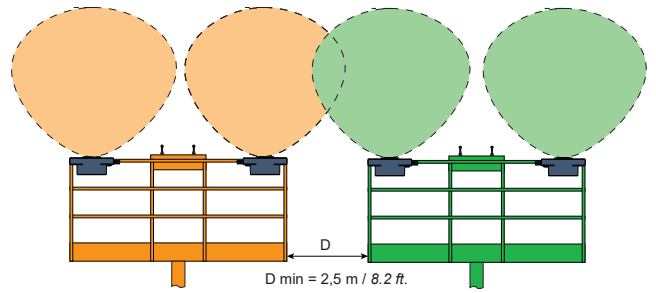


Tilt angle



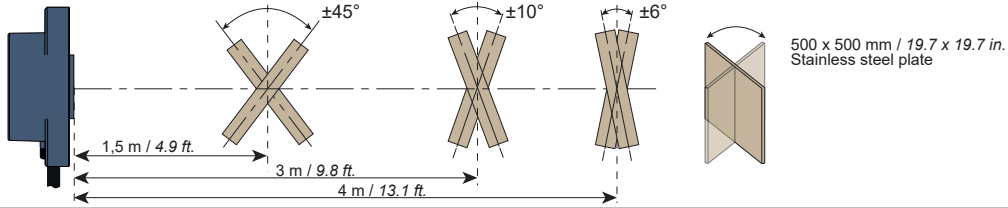


Detection curves for different objects

Detection curve with 100 x 100 mm square target

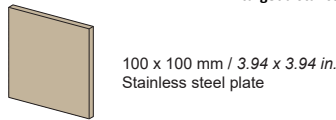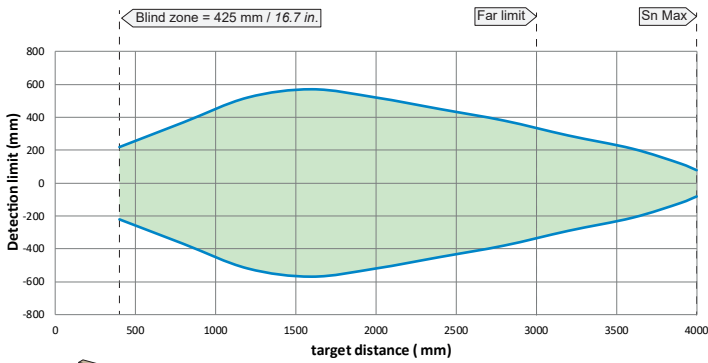



Detection curve with round bar

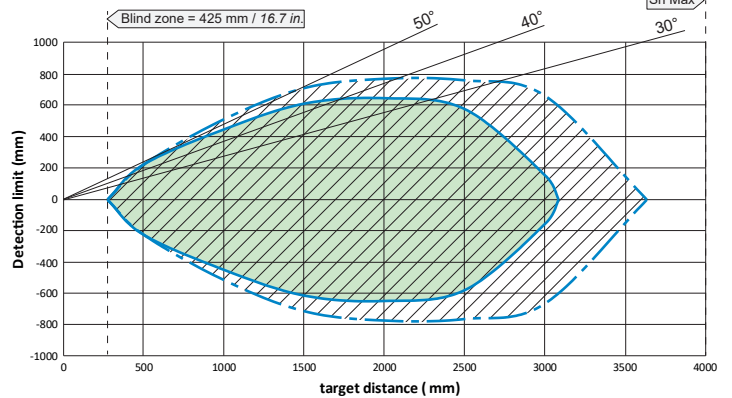

Sensor setting

The settings can be changed with the Ultrasonic Sensors configuration Interface and the dedicated software
 See : XXZBOX01 / XXZKIT01 Ultrasonic sensors configuration interface, Instruction sheet

https://tesensors.com/global/en/document/QGH70768_EN

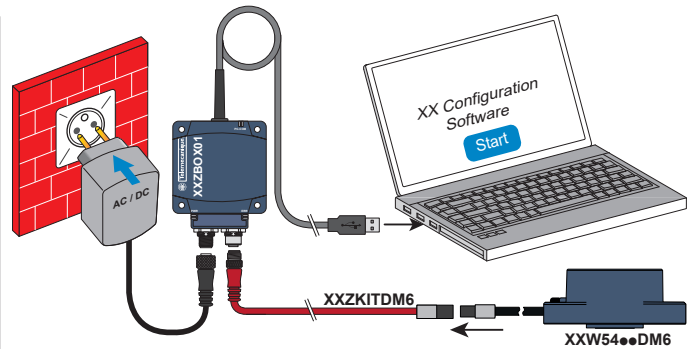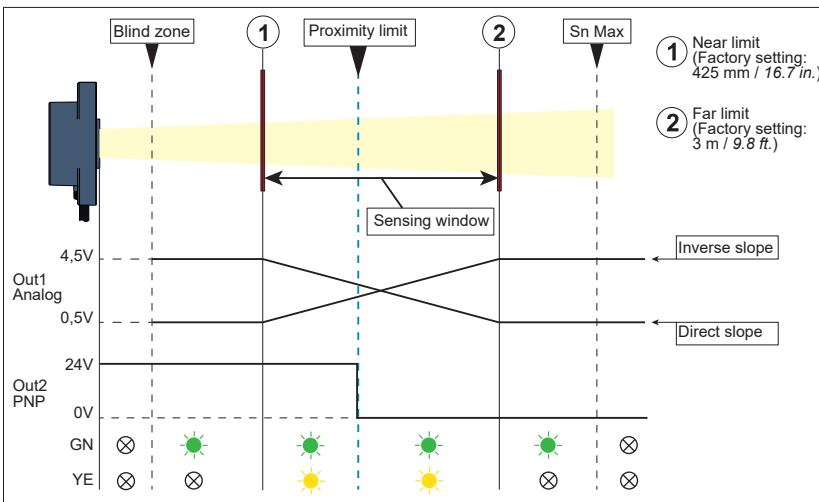

Note: The sensor's analog output will output 5 Volts when it detects excessive environmental noise.

CE **Manufacturer :**
 Schneider Electric Industries SAS
 35 rue Joseph Monier
 92500 Rueil Malmaison
 France

UK CA **UK Representative :**
 Schneider Electric Limited
 Stafford Park 5
 Telford, TF3 3BL
 United Kingdom

Note :
 You can download this Instruction Sheet in different languages from our website at: www.tesensors.com
 We welcome your comments about this document. You can reach us through the customer support page on your local website.

Scan the Qr-code to access this Instruction Sheet in different languages.



<http://qr.tesensors.com/XX0003>

Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel.
 No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.
 © 2022 Schneider Electric. "All Rights Reserved."